 
## **Instructions for Replacing an RS Sleeve**



Remove and retain the two half base plates



2

4

5

6

7

8

Remove (and retain) the foam by lifting from the centre



Open flap on new RS Sleeve



 
Bend foam and insert both ends into new RS Sleeve



Flatten foam to fill sleeve



Adjust seam as required to fit into the perimeter groove in the foam to ensure WCF compliance



WCF Conforming

Non-Conforming / Illegal



Install small end of half baseplates (flat side down) into foam pocket between foam and sleeve



Flatten baseplates to tighten fabric

For more information on RS components please visit balanceplus.com/rshelp